

НАДСТРОЙКА С ПОЛКАМИ И ПРИСТАВКОЙ ДЛЯ МОНИТОРА

202.08.0XX (25x115)

202.07.0XX (25x80)













ИНСТРУКЦИЯ ПО СБОРКЕ



Необходимый инструмент



Фурнитура

202.08.0XX - для ТВИН и МОНО	A 8x  M5x30	B 4x  M4x35	C 8x  4x35	D 2x  M6x15	E 18x  φ5	
202.07.0XX - для КОЛИБРИ	A 8x  M5x30	B 4x  M4x35	C 8x  4x35	D 2x  M6x15	E 12x  φ5	

Комплектующие


1




2




3

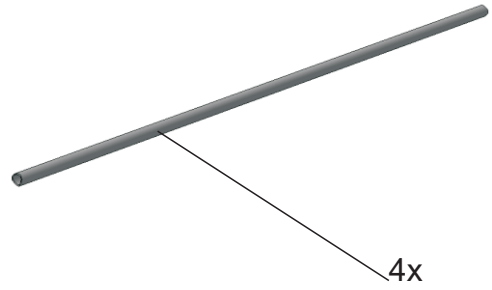

5

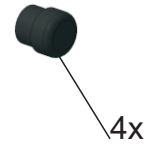


4

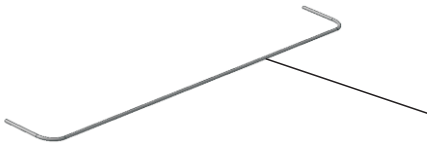

9x - для 202.08.0XX
6x - для 202.07.0XX


6

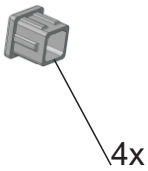


7




8

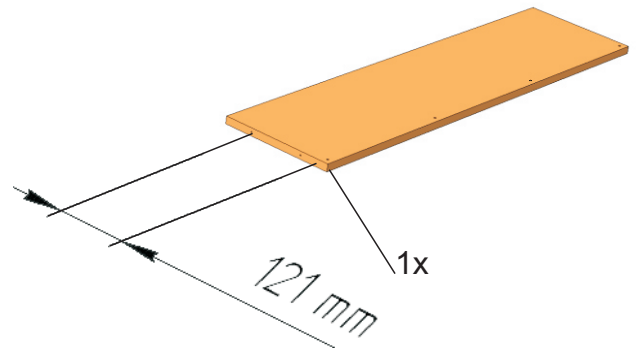


9

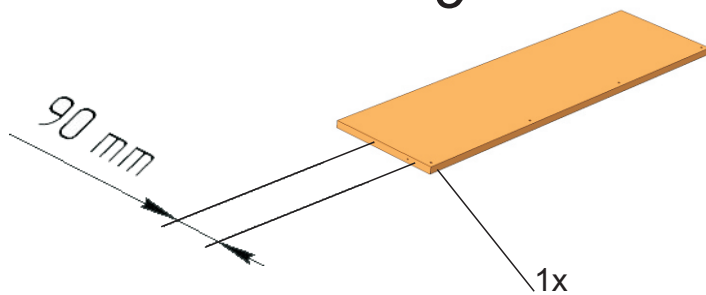


10

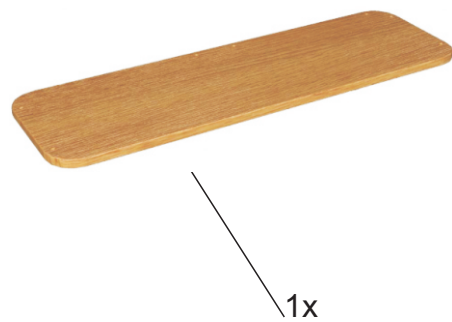

1

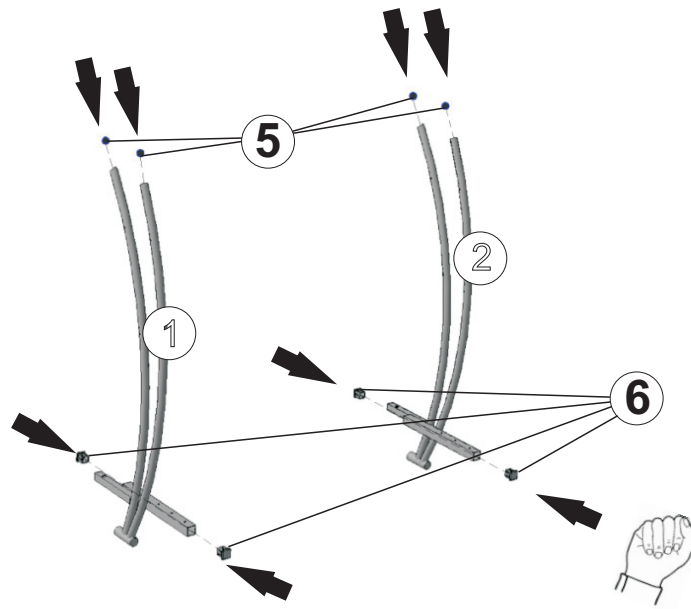


2

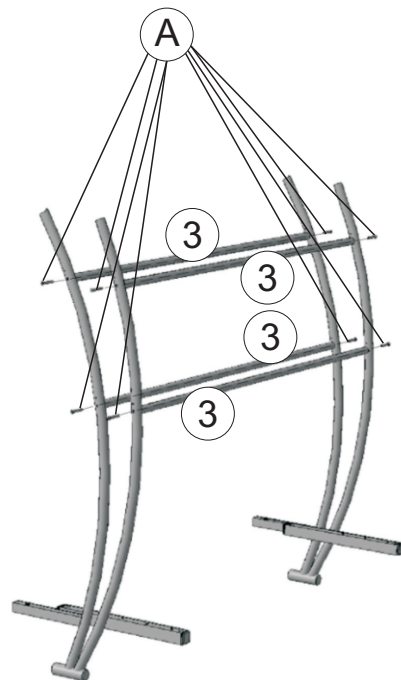


A
8x M5x30




3


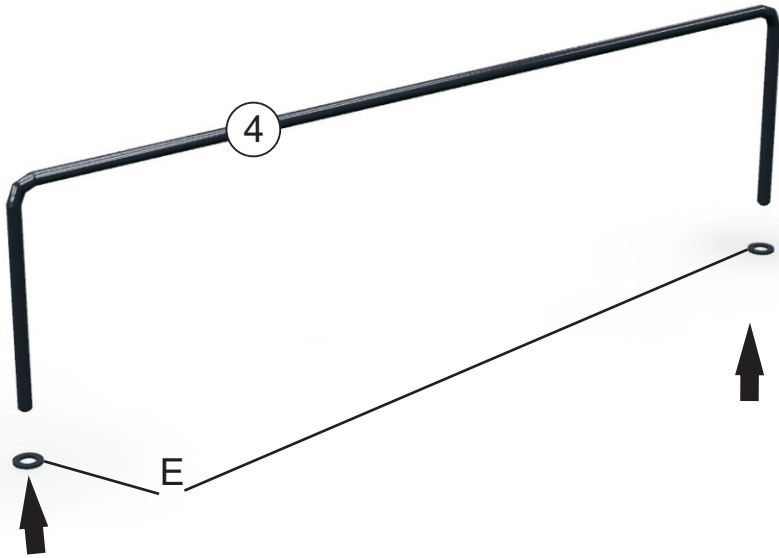


202.08.0XX	E	
	18x	φ5
202.07.0XX	E	
	12x	φ5

4

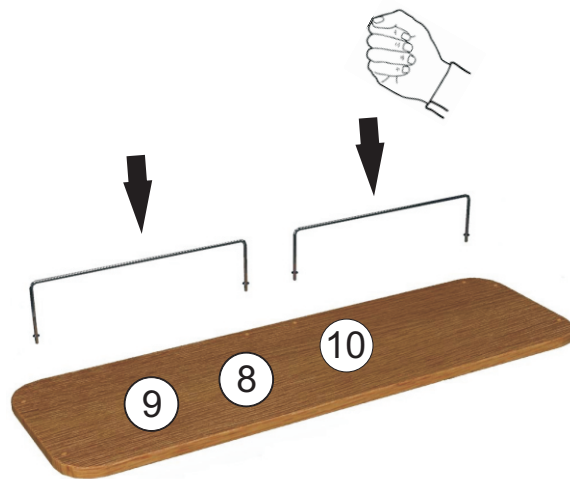

5

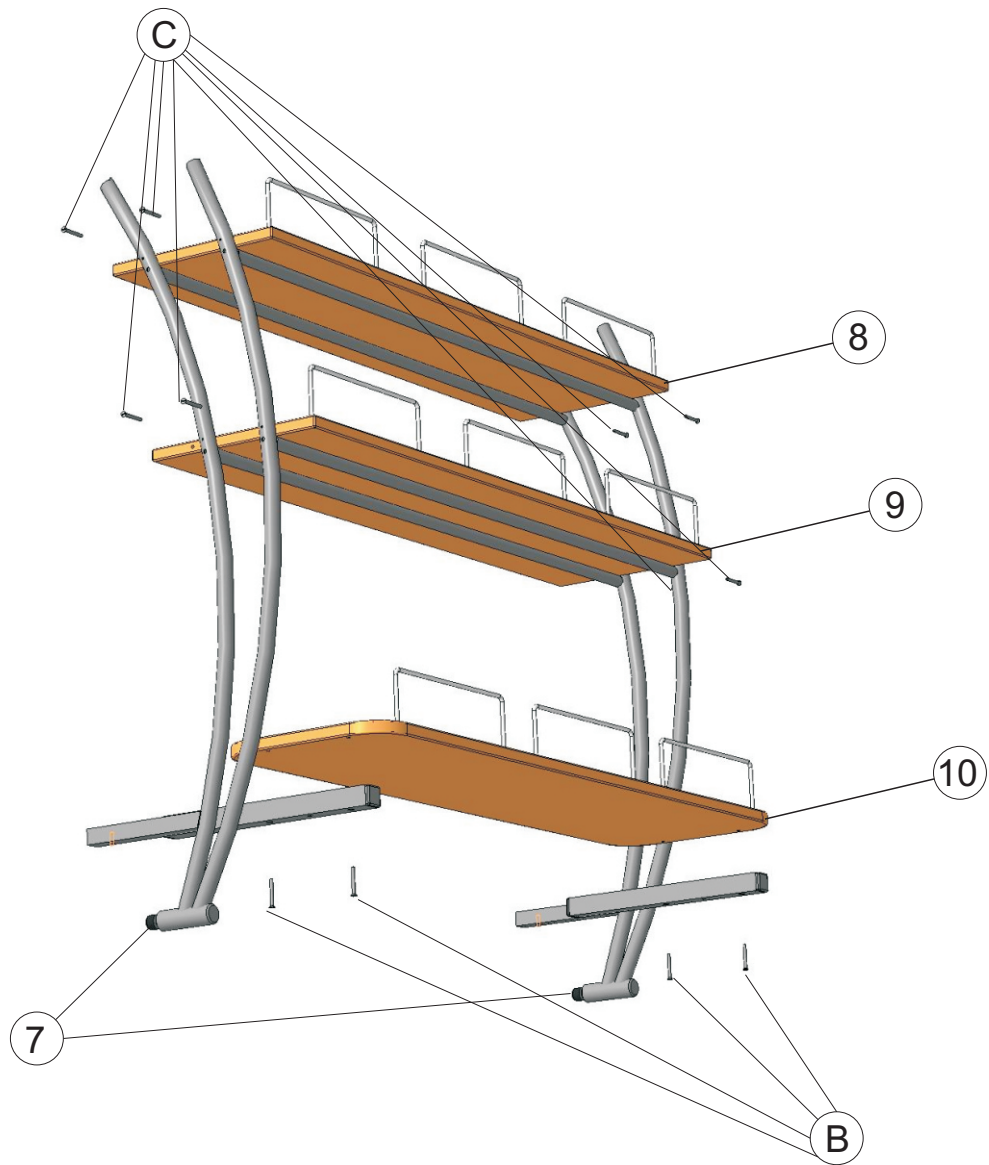

6

